


NO MORE THAN 2 ELECTRIC RISERS ARE PERMITTED ON A POLE.


RISERS FROM UNDERGROUND TO OVERHEAD LINES ARE TO BE LOCATED AS FOLLOWS:

- THE RISER MUST BE LOCATED 30° TO EITHER SIDE OF THE CENTERLINE OF THE ELECTRIC LINE.
- RISERS ARE TO BE LOCATED ON THE POLE FACE OPPOSITE FROM WHERE THE CROSSARM IS LOCATED
- IF THERE IS NO CROSSARM, THE RISER IS LOCATED ON THE SIDE WHERE THE LINE DEAD - ENDS.

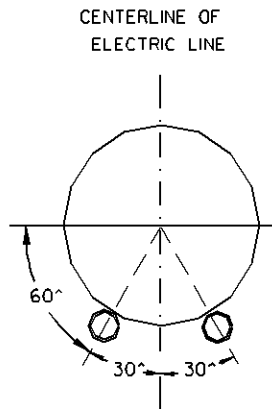


CONTACT POWER DELIVERY PRIOR TO INSTALLING AN U.G. SERVICE TO A UTILITY POLE.

CUSTOMER IS TO FURNISH AND COIL UP SUFFICIENT SERVICE CABLE TO REACH FROM THE GROUND LINE TO THE SERVICE CONNECTION POINT. THE CABLE COIL SHALL BE TIED TO THE POLE SECURELY AT LEAST 8.0 FT ABOVE GROUND. CONSULT WITH DUKE ENERGY REPRESENTATIVE FOR THE REQUIRED CABLE LENGTH.

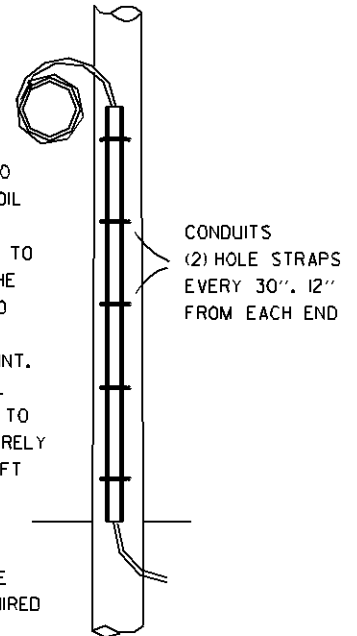

RISERS ON POLES WITH CROSSARMS ARE TO BE ROUTED UP THE FACE OF THE POLE OPPOSITE THE FACE WHERE THE CROSSARM IS ATTACHED.

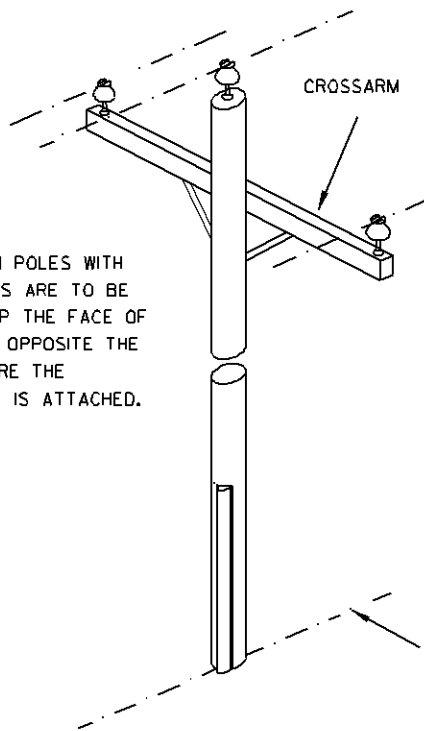

RISERS ON POLES WITHOUT CROSSARMS ARE TO BE ROUTED UP THE SAME FACE OF THE POLE WHERE THE LINE DEAD ENDS.

